

LC-Relay-ESP12-4R-MV

AC/DC power supply ESP8266 WIFI four-way relay module ESP-12F development board
secondary development

Overview:

The ESP8266 four-way relay development board is equipped with ESP-12F WiFi module, all I/O ports are led out, and it supports AC90-250V/DC7-30V/5V and other power supply methods. Provide Arduino development environment reference code, suitable for ESP8266 secondary development learning, smart home wireless control and other occasions.


Features:

1. On-board mature and stable ESP-12F WiFi module, large capacity 4M Byte Flash;
2. The I/O port and UART program download port of the WiFi module are all led out to facilitate secondary development;
3. Onboard AC-DC switching power supply module, power supply mode supports AC90-250V/DC7-30V/5V;
4. The onboard WiFi module RST reset button;
5. ESP-12F supports development tools such as Eclipse/Arduino IDE, and provides reference programs under the Arduino development environment;
6. There are 4 5V relays on board, which output switch signals, suitable for controlling loads whose working voltage is within AC 250V/DC30V;
7. On-board power indicator, 1 programmable LED and relay indicator.


3. Hardware introduction and description

1. Board size: 93*87mm

Weight: 90g

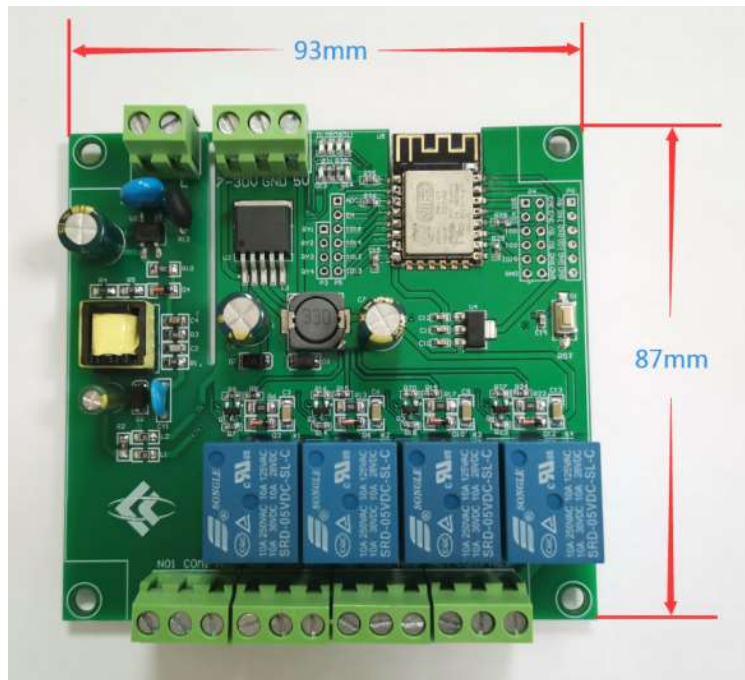

2. Interface introduction:

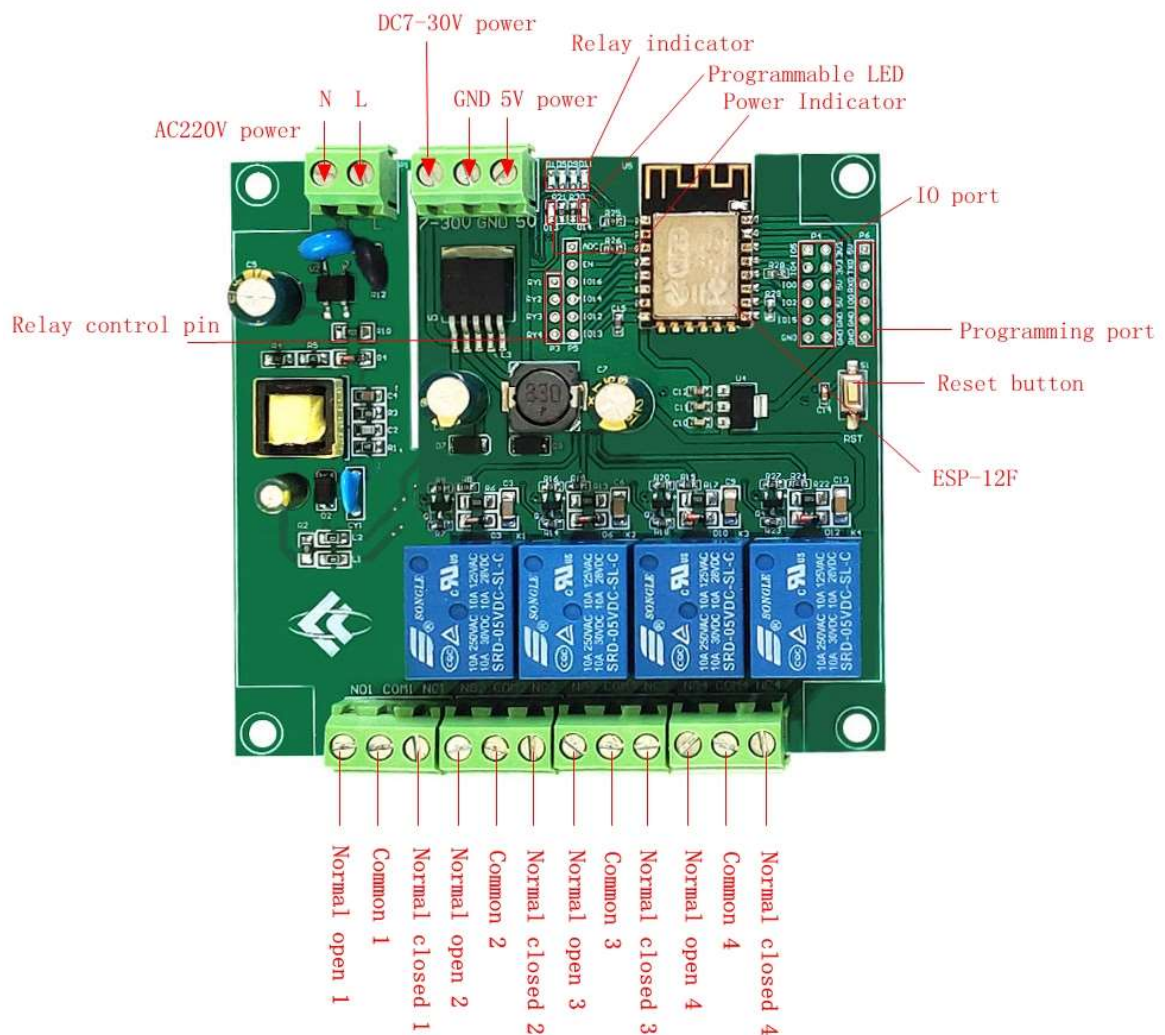

Programming port: ESP8266's GND, RX, TX, 5V are respectively connected to the GND, TX, RX, 5V of the external TTL serial port module. IO0 needs to be connected to GND when downloading, and then disconnect the connection between IO0 and GND after the download is complete;

Relay output:

NC: Normally closed, the relay is short-connected with COM before it is closed, and it is suspended after being closed;

COM: public end;

NO: Normally open end, the relay is suspended before closing, and shorted to COM after closing.

3. Introduction to GPIO port

Num.	Name	Function	Num.	Name	Function
1	ADC	A/D conversion result. Input voltage range 0~1V, value range: 0~1024	11	IO15	GPIO15; MTDO; HSPI_CS; UART0_RTS
2	EN	Enable pin, pull up by default	12	TXD	UART0_TXD; GPIO1
3	IO16	GPIO16	13	RXD	UART0_RXD; GPIO3
4	IO14	GPIO14; HSPI_CLK	14	GND	Power ground
5	IO12	GPIO12; HSPI_MISO	15	5V	5V power supply
6	IO13	GPIO13; HSPI_MOSI; UART0_CTS	16	3.3V	3.3V power supply
7	IO5	GPIO5	17	RY1	One relay drive port, you can use a shorting cap and IO16 to short; if you want to use other I/O drive relays, you can use DuPont wire jumpers
8	IO4	GPIO4	18	RY2	One relay drive port, you can use a shorting cap and IO14 to short; if you want to use other I/O drive relays, you can use DuPont wire jumpers
9	IO0	GPIO0	19	RY3	One relay drive port, you can use a shorting cap and IO12 to short; if you want to use other I/O drive relays, you can use DuPont wire jumpers
10	IO2	GPIO2; UART1_TXD	20	RY4	One relay drive port, you can use a shorting cap and IO13 to short; if you want to use other I/O drive relays, you can use DuPont wire jumpers

4. Arduino development environment construction

ESP8266 supports development tools such as Eclipse/Arduino IDE. It is relatively simple to use Arduino. Here is how to build Arduino development environment:

1. Install Arduino IDE 1.8.9 or the latest version;
2. Open the Arduino IDE, click File-Preferences in the menu bar, and click Add URL in "Additional Development Board Manager URL" after entering the preferences:
http://arduino.esp8266.com/stable/package_esp8266com_index.json

4. Click Tools-Development Board-Development Board Manager in the menu bar, then search for "ESP8266" to install the Arduino support package 2.5.2 or the latest version of ESP8266

5. Program download

1, Use a jumper cap to connect the IO0 and GND pins, prepare a TTL serial port module (for example: FT232) to plug into the computer USB, the serial port module and the development board are connected as follows:

TTL serial port module	ESP8266 development board
GND	GND
TX	RX
RX	TX
5V	5V

2. Click Tools-Development Board in the menu bar, select the development board as ESPino (ESP-12 module)

3. Open the program you want to download, click on Tools-Port in the menu bar to select the correct port number

4. After clicking "Upload", the program will be automatically compiled and downloaded to the development board, as follows:



```
LED_Relay | Arduino 1.8.9
文件 编辑 项目 工具 帮助
LED_Relay
/*
  文件名称: LED_Relay.ino
  功能: LED闪烁+继电器开启
*/
#define PIN_LED 16
#define PIN_RELAY 5

void setup()
{
  pinMode(PIN_LED, OUTPUT); //输出模式
  pinMode(PIN_RELAY, OUTPUT); //输出模式
  digitalWrite(PIN_LED, HIGH); //LED默认关闭
  digitalWrite(PIN_RELAY, HIGH); //继电器默认开启
}

void loop()
{
  digitalWrite(PIN_LED, LOW); //打开LED
  delay(1000); //延时1S
  digitalWrite(PIN_LED, HIGH); //关闭LED
  delay(1000); //延时1S
}

上传成功。
Leaving...
Hard resetting via RTS pin...
3 ESPino (ESP-12 Module) 在 COM48
```

5. Finally, disconnect IO0 and GND, power on the development board again or press the reset

button to run the program.